

1998 Ducati ST2

Legend of fuse box (4)

POS.	DESCRIPTION	RAT.
A-1	Main	30 A
B-2	High and low beams	15 A
C-3	Direction indicators, pilot lights, tail lights and instrument panel lights	7.5 A
D-4	Stop, warning horn	7.5 A
E-5	Digital display	3 A
F-6	Spare fuse	3 A
G-7	Spare fuse	15 A
H-8	Spare fuse	7.5 A
		3 A

- 1 R.H. twist grip switch
- 2 Key-operated switch
- 3 Ignition relay
- 4 Fuse box
- 5 Turn indicator flasher
- 6 Lights relay
- 7 Starter motor
- 8 Starter solenoid
- 9 Battery
- 10 Coolant temperature sensor
- 11 Fan relay
- 12 Electric fan
- 13 Rear right-turn indicator
- 14 Tail light
- 15 Number plate light
- 16 Rear left-turn indicator
- 17 Fuel tank with fuel pump and fuel level sensor
- 18 Diagnostic socket
- 19 Coil (front cylinder)
- 20 Coil (rear cylinder)
- 21 Spark plug (front cylinder)
- 22 Spark plug (rear cylinder)
- 23 Injector (front cylinder)
- 24 Injector (rear cylinder)
- 25 Throttle position sensor
- 26 Timing sensor
- 27 Coolant temperature sensor
- 28 Computer "Marelli"
- 29 Injection relay fuses
- 30 Horn
- 31 Regulator fuse 40A
- 32 Regulator
- 33 Generator
- 34 Neutral light switch
- 35 Oil pressure switch
- 36 Rear STOP light switch
- 37 Front STOP microswitch
- 38 L.H. twist grip switch
- 39 Air pressure sensor
- 40 Air temperature sensor
- 41 Instrument panel
- 42 Digital display
- 43 Front left-turn indicator
- 44 Headlamp
- 45 Front right-turn indicator
- 46 Injection relay

